



Instructions **Assembly counterframes B - A**

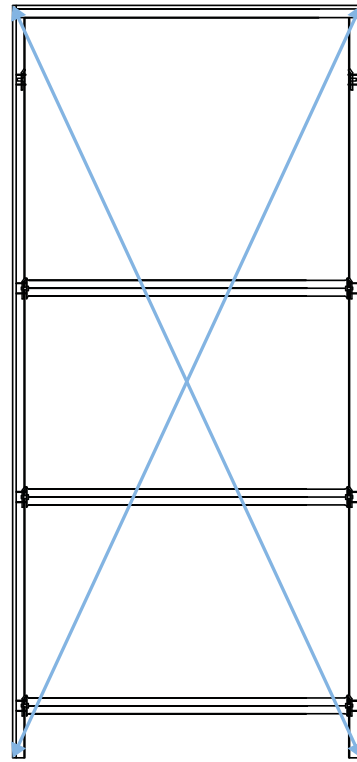

Detailed corner assembly of counterframes B - A.

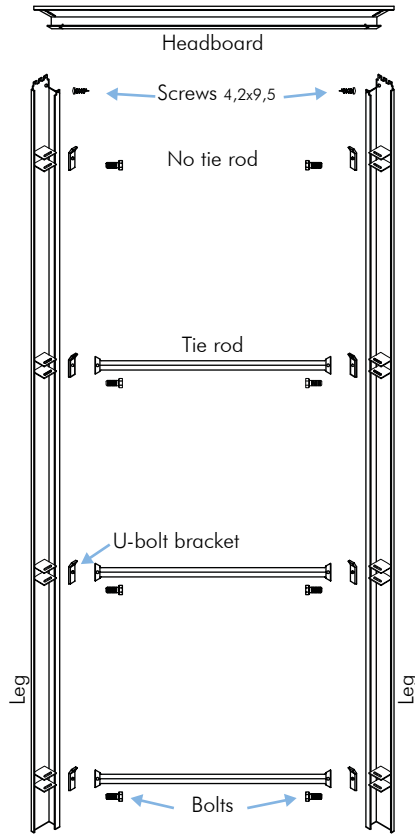

Special bracket and tie rod for counterframes B - A.



Special bracket for lights larger than 90x210 cm. Counterframes B - A

EQUIPMENT:

- 2 legs
- 1 headboard
- 3 tie rods
- 8 15X5 U-bolts
- 8 TE 8X18 bolts
- 2 TC 4.2X9.5 screws


Necessary tools

- (not included):
- protective gloves
 - 400g hammer
 - Phillips screwdriver size 2
 - 13mm wrench

EQUAL DIAGONALS

Place the assembled counterframe on the ground and check the diagonals. If the measurements are equal, it is OK; if the measurements are different, apply pressure opposite to the larger measurement and check again.

A measurement difference of 4 mm is acceptable.

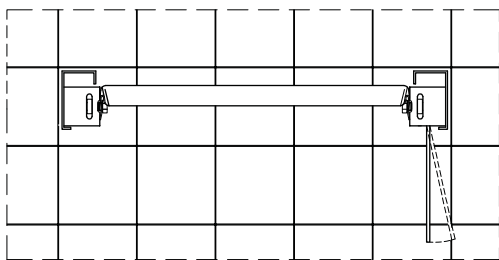

RECOMMENDATIONS:

PARALLELISM

-After assembling the counterframe, check the parallelism of the legs, even by eye. If there is a noticeable difference, insert a lever into the bracket and align the legs parallel to each other.