


# Instructions **Assembly frame**

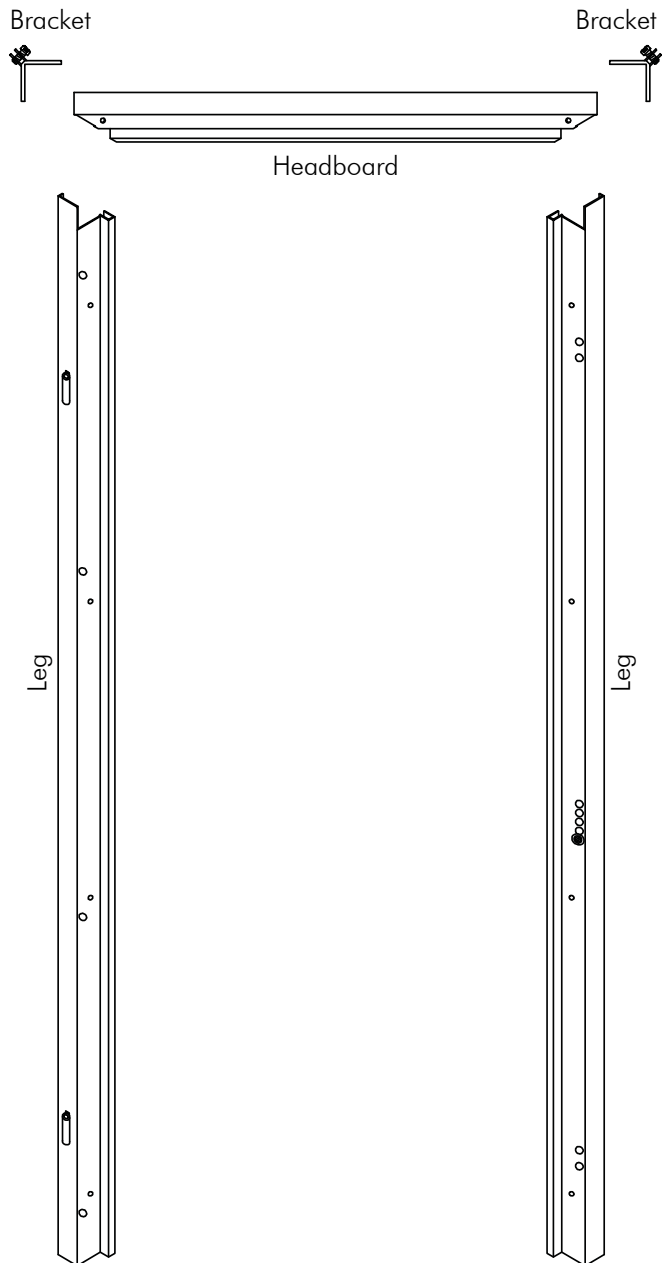

## Assembly sequence



1 - Insert the bracket in the headboard.



2 - Bring your leg closer and insert the square.



3 - Tighten the screw by applying pressure with your fingers to align the corner of the frame.

### EQUIPMENT:

- 2 legs
- 1 headboard
- 2 brackets

### REQUIRED TOOLS

- (not included):
- protective gloves
  - 5 mm hex key

NOTE: \* The frames for two leaf security doors will be supplied unassembled. Upon request, frames for one leaf security doors without skylights can also be supplied unassembled, at an additional cost.